

+++ THIS HANDOUT IS INCOMPLETE AND UNDER DEVELOPEMENT +++

© This document is based on the former SCS Tracker manual by SCS GmbH, Hannau. The document is just a working draft.

# Instruction Manual and Command Description for the Teensy **RPR** TNC

## Firmware Version 0.67

### Index

1. Introduction.....	1
2. Configuration by Software Commands .....	1
2.1. To "The Firmware" (NORD><LINK) compatible Commands .....	2
2.2 Teensy RPR TNC specific Commands.....	9
3. Die Meaning of the LED's .....	21
4. Background-Information to „Robust-PR“-Mode (RPR) .....	21

## 1. Introduction

The **Teensy RPR TNC** the "Terminal Node Controller" following the legendary SCS Tracker which production ended 2020.

The **Teensy RPR TNC** is equally usable as universal TNC for chat- and mail operation, as well as a standalone APRS<sup>1</sup>-position tracker.

There are 2 circuit board versions existing. Version 1 is the first generation with the need of external 5V supply and not built for screen connectivity. Version 2 can be 12V supplied from i.e. an ICOM radio, has a 3,5mm jack for CW and is by many operator used to connect a display in order to monitor RPR activities directly.

## 2. Configuration by Software Commands

### The Configuration

The basic configuration requires the own callsign ("Mycall"), the desired Packet-Radio operation mode as well as the transmit output level(s) to modulate the transmitter. For APRS it can be necessary to enter the position (if no GPS antenna is connected), the beacon timer interval as well as the APRS symbol (your own symbol that appears on an APRS-map) and the desired APRS mode („FIX", which is a manually entered fixed position, or „GPS") as basic configuration.

### The available Commands of the Teensy **RPR** TNC Operating System

The **Teensy RPR TNC** comes with two different modes to communicate or to exchange data on the USB connection to the computer: Terminalmode and Hostmode. After power-on the TNC is

always in Terminalmode and can be accessed with an easy terminal program like PuTTY. For data transparent multi channel operation it is recommended to use the so-called host-mode, which can be activated by command and is supported by many PC programs designed for Packet-Radio operation.

Command interpreter as well as hostmode adhere closely to "The Firmware" by NORD<>LINK e. V. and therefore are backwards compatible to "The Firmware" (TNC2).

The **Teensy RPR TNC** makes use of 11 virtual channels for Packet-Radio, which are one monitor-channel (0) and 10 channels for Packet-Radio-connects, which means that 10 parallel Packet-Radio connects can be established the same time.

In terminal mode every command must be preceded with the **ESC**-character (ASCII 27) to open the command interpreter. Otherwise the characters being entered are sent to the currently selected virtual channel (see command **S**). In the case that the virtual channel is not connected, this characters usually are ignored, which means discarded. In channel 0 however, they are interpreted as unproto information and (after a CR as termination) transmitted as a part of an unproto packet.

Apart from a few exceptions, nearly all commands are available in terminal mode as well as in hostmode. In hostmode the operation of the **Teensy RPR TNC** is mainly given by the PC program used.

## 2.1. To "The Firmware" (NORD<>LINK) compatible Commands

Concerning the standard commands the **Teensy RPR TNC** behaves compatible to a TNC2 with „TF2.7b“ as operating system. The following commands are available (not case sensible!:

### **ESC A** (Add-Linefeed)

Default: 1

Possible parameters: 0, 1

Automatic insertion of a Linefeed-character <LF> after a CARRIAGE RETURN <CR> to the terminal. 1 = yes, 0 = no.

### **ESC B**

Default: none

Possible parameters: none

Counts the number of the round trips of the main software loop per second. This number allows conclusions about the internal processing speed of the TNC firmware. This command was left remaining just for compatibility reasons but has no relevance to for the user.

### **C** (Connect)

Default: -

Possible parameters: Target call (if required, followed by up to 8 digipeater-callsigns)

Example: C DL6MAA DB0UAL (DL6MAA shall be connected via DB0UAL.)

The C-command is used to establish a connection to a distant station. It is not necessary to enter a 'v' or 'via' between the target call and the digipeater calls. A C-command invoked on channel 0 defines the path for unproto (UI) packets.

#### **D** (Disconnect)

Default: none

Possible parameters: none

An existing connection will be disconnected. If after entering the "D" command there is still information being send or confirmed, the "Disconnect" will be carried out when the last information packet is received and confirmed. If the D-Command is repeated, this process can be cancelled. If the D-command is invoked while a connect or a disconnect is in progress, the TNC immediately resumes the disconnected condition and automatically sends a DISC-frame to prevent unnecessary transmissions for the case that the own TNC did not copy the answers of the distant station.

#### **ESC** **E** (Echo)

Default: 1

Possible parameters: 0, 1

Enables/disables the echoing of entered characters (data or commands) to the terminal. 1 = yes, 0 = no.

To avoid problems with terminal programs with echo enabled, non printable characters are replaced with a ".". Just BELL and TAB are transparently echoed to the terminal.

#### **ESC** **F** (Frack)

Default: 500

Possible parameters: 1...1500

„Frack“ is the maximum waiting time between the transmission of a packet and the confirmation by the distant station. (Afterwards a request back will be sent). With “The Firmware“ Frack is implemented as a dynamic “Round Trip Timer“ which adapts to the actual channel activities. The value set with the F-command serves as the start value for the automatism and also determines the length of the gap between SABM packets (link establishment).

The time can be entered directly in seconds. With entries < 16 the value will be multiplied with 100 and then divided by 2. Entries > 15 are directly interpreted as 10 msec steps. (L2-„Round Trip Time“).

#### **ESC** **I** (Mycall)

Default: SCSTNC

Possible parameters: CALSIG (own callsign, maximum 6 characters plus SSID.)

Entry of the own callsign („Mycall“). For each virtual TNC-channel an own callsign can be entered. After a “Disconnect“ the callsign of channel 0 is adopted.

ATTENTION: The **Teensy RPR TNC** only transmits after a callsign has been entered, but not with the default callsign “**RPRTNC**“ as “Mycall“!

### **ESC**    **JHOST** (Hostmode)

Default: 0

Possible parameters: 0, 1

Switches between terminalmode und hostmode. The hostmode is WA8DED-compatible and is supported by many PC-application programmes (e. g. terminal programmes).

### **ESC**    **L** (Linkstatus)

Default: none

Possible parameters: 0...10

The L command displays the linkstatus of one (channel number as parameter) or all (no parameter) virtual channel(s). Displayed are routing information (call and list of digipeaters), quantity of received frames, quantity of not yet sent frames, quantity of unacknowledged frames and the retry counter respectively. The respective channel in use is marked with a '+' character.

### **ESC**    **M** (Monitor)

Default: N

Possible parameters: N, U, I, S, C, +, - (multiple parameters simultaneously possible)

Activation and configuration of the monitor mode. The parameters define which frames shall be displayed.

Possible parameters:

- N     Monitor disabled
- I     Information (I-Packets)
- U     Unproto transmissions (UI-Packets)
- S     Control-Packets
- C     Monitor even whilst connected
- +     <List of up to 8 calls >: only packets from this sender
- <   <List of up to 8 calls >: no packets from this sender

The combined usage of '+-' and '-'-parameters is not supported. They have to be entered as last parameter directly before the calls. The entry of '+' or '-' without call(s) deletes the actual list. Interpretation of SSID's is not supported!

**ESC N** (Retry-Counter)

Default: 10

Possible parameters: 0...127

Configures the Retry-Counter. The entered value defines how many times a packet transmission shall be repeated in the case of error. (0 = unlimited). For every channel a separate value can be entered. After RESET or disconnect the value being defined for channel 0 will be restored. Do NEVER set this value to 0 in the case of unattended operation!

**ESC O** (MaxFrame)

Default: 2

Possible parameters: 1...7

Maximum allowed number of unacknowledged and unanswered information packets (I-Frames). For every channel a separate value can be entered. After RESET or disconnect the value defined for channel 0 will be restored.

**ESC P** (Persistence)

Default: 32

Possible parameters: 0...255

Persistence-configuration. Without parameter the current setting is displayed. With DAMA-operation the Persistence value is ignored!

**ESC R** (Digipeating)

Default: 1

Possible parameters: 0, 1

Enables / disables the digipeat-function. 1 = on, 0 = off.

**ESC S** (Switch channel)

Default: 0

Possible parameters: 0...10

Selects between the virtual channels (0 = Monitor channel).

**ESC T** (TX-Delay)

Default: 10

Possible parameters: 0...500

Delay between keying of the transmitter and start of the data transmission itself. („TX-Delay“). The values are entered in 10 ms steps. Please evaluate and set an as low as possible value by experiment.

### **ESC** U (Connect-Text, „C-Text“)

Default: 0

Possible parameters: 0, 1 [optional CText], 2 [optional CText]

With the U-command one has the possibility to automatically transmit a small amount of text to the distant station when a connect is received (“C-Text“). The defined text also remains stored when the U parameter is set back to 0. With 'U2' the TNC can be forced to disconnect a current connection at receipt of the string "//Q" (in Terminal mode only!). For that, the string "//Q" must be at the beginning of a single packet. This function is disabled in hostmode.

Examples:

U 1 Terminal offline	Entering and activating the C-text „Terminal Offline“.
U 1	Activates already existing C-Text.
U 2 Terminal offline	Entering and activating the C-text „Terminal Offline“ incl. //Q-Function.
U 0	Disabling C-Text.
U	Displaying C-Text.

### **ESC** V (Version)

Default: none

Possible parameters: none

Displays a string which contains information about the currently installed software version.

Latest: *DSPTNC Firmware v.0.67, (C) 2022 SCS GmbH & Co. KG*

### **ESC** W (Slottime)

Default: 10

Possible parameters: 0...127

Defines the „Slottime“ in milliseconds. Without parameter the current setting is displayed. The W-value is ignored at DAMA operation. The TNC always goes to transmit immediately.

### **ESC** X (PTT)

Default: 1

Possible parameters: 0, 1

Controls the PTT line of the TNC. If necessary the keying of the radio can be suppressed, e. g. when a channel shall be observed and it shall be prevented that the TNC replies to an incoming connect with a “busy” packet. 1 = normal PTT-operation, 0 = PTT always deactivated.

**ESC Y** (Number of channels)

Default: 10

Possible parameters: 0...10

Defines the maximum number of simultaneously allowed connections until the next connecting station is rejected with a "busy". Without argument the number of currently connected channels is displayed in the form "maximum number of channels (used channels)" (General limitation: The number of used channels can only be determined correctly when on all channels the same Mycall is used, as defined for the monitor channel S0). Example-displayed: "10 (0)".

**ESC Z** (Flow-Control)

Default: 3

Possible parameters: 0...3

Enables / disables the flow-control and the XON/XOFF-handshake to the terminal. With flow-control enabled the TNC does not send characters to the terminal while data or commands are entered. With flow-control disabled characters are immediately sent to the terminal, independent of whether a line of text or a command is currently entered.

If the XON/XOFF-handshake is enabled, the dataflow from the TNC to the terminal can be stopped with Ctrl-S and started again with Ctrl-Q.

Possible parameters:

0	Flow-control	off,	XON/XOFF	off
1	Flow-control	on,	XON/XOFF	off
2	Flow-control	off,	XON/XOFF	on
3	Flow-control	on,	XON/XOFF	on

**ESC @B**

Default: none

Possible parameters: none

Displays the quantity of free TNC buffers.

**ESC @D** (Duplex)

Default: 0

Possible parameters: 0,1

Switches on / off the full duplex operation. 0 = off, 1 = on.

**ESC @F (Flags)**

Default: 0

Possible parameters: 0,1

Send flags in pauses. 0 = no, 1 = yes.

**ESC @I (Ipoll)**

Default: 60

Possible parameters: 1...256

Defines or displays the value for the maximum length of the IPOLL-frame. (Not valid with DAMA!).

**ESC @K (KISS/SMACK)**

Default: none

Possible parameters: none

Enables the KISS/SMACK-mode. With the decimal byte-sequence 192, 255, 192, 13 the TNC can be returned to normal operation without RESET (power off/on).

**ESC @T2 (Timer 2)**

Default: 100

Possible parameters: 0...100000

AX.25-„Timer 2“: Interval before the acknowledgment of a received packet (in 10 ms steps, 150 means 1.5 seconds)

**ESC @T3 (Timer 3)**

Default: 30000

Possible parameters: 0...100000

AX.25-„Timer 3“: Time the TNC waits for a 'sign of life' from the distant station when connected. After T3 is elapsed, the distant station is requested if it is still ready to receive.

**ESC @U (UI-Poll)**

Default: 0

Possible parameters: 0, 1

Enables or disables UIPOLL (1 = UI+, 0 = UI).



**ESC** @V

Default: 0

Possible parameters: 0, 1

Enables or disables the call check (1 = yes, 0 = no).

## 2.2 Teensy RPR TNC specific Commands

**(Extension of the „Standard-TNC-Command Set“)**

### **APRS-Commands/Configuration for „Stand Alone“-Position Tracking**

“Stand alone” means position tracking that works without a PC being connected. The actual position data is sent in regular intervals in APRS format. The position can be entered either manually (“Fix-operation” “Mode %A2”) or received from a connected GPS receiver (“GPS-operation” “Mode %A1”).

For setting up the APRS-function, several commands are available, always beginning with %A.

APRS-datagrams are always sent with the Packet-Radio modulation mode previously set with the %B-command.

#### **Important:**

**The APRS-beacon uses as sender callsign the Mycall (see I-command) of the virtual channel 0 or the optional/special APRS-Mycall (%AM) if it was defined. As long as no callsign is defined, the APRS-beacon cannot be activated.**

**Additionally the Teensy RPR TNC must be supplied with a valid position (GPS-information) in mode %A1, or with a fixed position in mode %A2, entered with the help of the %AO-command – otherwise the Tracker cannot transmit a position beacon.**

The following functions are available:

**ESC** %A (APRS-main switch)

Default: 1

Possible parameters: 0, 1, 2

This „APRS-main switch“ serves to setup the APRS-mode:

0: OFF, APRS-beacon is switched off.

1: GPS, APRS-beacon transmits GPS data, if available.

The Tracker looks for RMC, GGA and GLL sentences (NMEA) on the GPS-Port. For plain position reports, one of these sentences is sufficient.

2: FIX, APRS-beacon transmits the fixed position data (settable with %AO), if available.

In GPS-mode the beacon only transmits when the position information is not older than the timeout interval defined with the %AV command (default 20 minutes). If the GPS receiver fails, the beacon stops the transmission after expiry of the timeout interval. Also refer to the %AI-command.

**ESC %AA** (APRS Altitude)

Default: 0

Possible parameters: 0...3

Configures the Tracker for transmission of the "altitude"-information in APRS packets.

The parameter is defined as follows:

0:

Altitude information disabled.

1:

If altitude information is available from the GPS receiver, it will be inserted in the UNCOMPRESSED format at the beginning of the comment field (/A=xxxxxx).

2:

If altitude information is available from the GPS receiver, it will be transmitted in the COMPRESSED (base 91) as well as in the UNCOMPRESSED format. Attention: In the compressed format the "course/speed"-information in the respective packets is omitted.

3:

Similar to 1, but even in the compressed mode, the altitude information is only added uncompressed (at the beginning of the comment field). This way the "course/speed"-information is preserved in the compressed position field.

**ESC %AB** or **ESC %AT** (APRS Timer)

Default: 900

Possible parameters: 0, 10...7200

Defines the beacon interval in seconds. With the default setting of 900 the beacon transmits every 15 minutes, if position data is available and the "global Mycall" on virtual channel 0 and/or the optional/special APRS-Mycall (%AM) is set.

Parameter 0 activates the speed dependent automatic operation: The interval calculates with the equation: Interval [sec] = 1800/GPS-speed [knots]. The interval is limited from 180 knots to its minimum of 10 seconds. At speeds lower than 1 knots the interval is limited to a maximum of 1800 seconds.

This automatic can only work properly when the speed information is contained in the received GPS data, which means that the receiver provides RMC data sets. If no speed information is available but automatic operation is selected, then the interval is set to 900 seconds. At „FIX“-position operation (%A2, see above) and automatic timer, the firmware sets the interval independent from the speed data of an eventually connected GPS receiver to 1800 seconds.

Speed dependent automatic tracking mode (set DIP-switch 1) is also possible, but with the limitation that the Tracker does not read GPS data during the sleep-phase and does with this not dynamically adapt the actual interval. It calculates the next interval out of the speed information available short term before the next sleep phase.

### **ESC**    **%AC** (APRS Comment)

Default: NONE

Possible parameters: - or maximum 80 characters of comment text

Defines the comment text that is added to every APRS-datagram. For example, a brief description of the system can be included here: "TEENSY RPR TNC, 20 W, Dipole". The comments maximum length is 80 characters. Longer comments will be rejected with an error message. A minus character (-) as first comment character sets the comment to "NONE", respectively deletes the comment.

APRS comments should be as short as possible, since longer APRS-datagrams lead to a (unnecessary) high channel occupation.

### **ESC**    **%AD** (APRS digipeating)

Default: 0

Possible parameters: 0...3

Configures APRS-digipeating.

The parameter is defined as follows:

0: No APRS-digipeating.

1: WIDE1-1 as digipeating alias.

2: WIDEn-N as digipeating aliases.

WIDE1-1 or WIDEn-N as digipeating aliases will be replaced at digipeating with the global Mycall (I-command at channel 0), i.e. call sign substitution is applied. If a WIDEn-N alias is digipeated, the N parameter will be decremented automatically. In the case of WIDEn-N no call sign substitution takes place.

The **Teensy RPR TNC** supports the "New Paradigm" for digipeating. If %AD is set to 1, the **Teensy RPR TNC** acts as "fill-in digipeater". The digipeater alias WIDE1-1 is changed to WIDE1 through digipeating.

### **ESC**    **%AE** (APRS status Every)

Default: 0

Possible parameters: 0...20

The %AE-parameter defines the frequency of the interspersed status reports (see %AR-parameter). With a value of 0 (default), the Tracker never sends the status report. With a value of

e.g. 3, after every third APRS-position packet a separate status-report packet will be transmitted, exactly 5 seconds after the beginning of the position packet.

Background: The separately transmitted status report can be used alternatively to a long APRS-comment (%AC-parameter). If somebody e.g. sends the description of his equipment not as APRS-comment but as status report, the APRS-position packet itself remains very short. This increases the probability that the important position information (which is only contained in the APRS-position packet and not in the status report) will properly be received and decoded. Less important and not varying information can this way easily (and with lower frequency) be interpersed as a status report.

### **ESC**    **%AF** (APRS Frequency Beacon)

Default: 0

Possible parameters: 0, and 60...30000

The parameter is defined as follows:

0:

Frequency list beacon is switched off.

60...30000:

The frequency list is transmitted every 60-30000 seconds, as long as at least one entry is available in the list. Immediately after setting a valid %AF parameter value, the beacon list is transmitted for the first time.

Every packet generated by the frequency list beacon starts with ">dF (Hz): " followed by 4 call signs and the corresponding (measured) frequency offset.

Attention: The frequency list beacon is also transmitted in KISS mode. If the beacon is not desired in KISS mode, the %AF command has to be set to "0" before switching to KISS mode. As the frequency list has a maximum size of 32 call signs, a frequency list beacon consists of up to 8 data packets in a row.

### **ESC**    **%AG** (APRS Gateway Modem Type)

Default: NONE

Possible parameters: same as for %B command, additionally NONE and HF-DUAL (H only is sufficient as parameter)

Allows cross-mode-digipeating of APRS packets, i.e. packets that have to be digipeated can be transmitted in a mode different from the receiving mode.

If the %AG command is set to a value **different from NONE**, the **Teensy RPR TNC** retransmits all packets that have to be digipeated due to a valid APRS-Alias (see %AD parameter) using the modulation defined with the %AG command. (Normally, if cross-mode-digipeating is required, this modulation will be different from the modulation defined with the %B command. However, for test purposes, both modulations may also be identical.) After transmitting a digipeated packet,

the **Teensy RPR TNC** automatically switches back to the (normal) modulation defined with the %B command. Receiving of packets is always performed in the modulation defined with the %B command, independent of the %AG setting.

If the %AG parameter is set to a value **different from NONE and the %AD parameter is set to 3** at the same time, the **Teensy RPR TNC** also digipeats packets without any digipeater in the path, but only if the destination call begins with the letter "A", for example "APRS". In the digipeated packet the digipeater **WIDE1-1** then appears in the path. This feature can be used for routing APRS packets from short wave (where they are often transmitted without digipeater in the path to keep them as short as possible) to VHF. These packets will appear there with WIDE3-3 in the path and thus have a good chance to reach an I-Gate to be forwarded into the Internet.

After switching to the new modulation, the transmission of the packet is delayed by at least 0.5 seconds. In this time, the **Teensy RPR TNC** checks if there is any valid signal in the respective modulation on the channel (DCD) and, if necessary, further delays the own transmission.

If the %AG parameter is set to **HF DUAL** ("H" is sufficient as argument, e.g. %AGH), the **Teensy RPR TNC** sends every packet which should be transmitted because of APRS digipeating, TWICE, and that directly one after the other. The first packet is always sent using "AFSK 300 Bd" modulation, using a center frequency of 2000 Hz. There follows an R300 packet. The modem waits at least two seconds between the packets, and checks in this time to see if RPR activity is present on the channel (DCD) in order to minimize collisions.

For the quasi-parallel transmission of own APRS beacons, the **%AU-parameter** must be set to 1 (see above). Then the setting %AGH causes transmission of the own APRS beacons in HF DUAL mode; Every transmission takes place twice, first in 300 Bd FSK and shortly after in RPR (R300).

Limitation of the DCD-function:

In case of split operation (different RX- and TX-frequencies), the audio signal for the DCD comes from the "wrong" source, same if a separate receiver and transmitter is used. Remark: In case of a separate RX and TX it would basically be possible to switch the RX-source with the relay output of the **Teensy RPR TNC**. However, this function has not yet been implemented.

**ESC**    **%AH** (Tracking, HF mode toggle)

Default: 0

Possible parameters: 0...2

Sets the modulation in tracking-mode (DIP-switch 1 set to ON) with APRS-beacon transmissions to alternate between 300 Bd (A)FSK and 300 Bd RPR, independent of the setting of the modulation which has been defined with the %B-parameter! (But the %B-parameter must be set to a value smaller than 1200, otherwise the %AH-parameter "1" will be ignored. That will prevent the station from accidentally transmitting the 300-Bd-waveform via a VHF-digipeater. %AH2 disables this baudrate restriction but otherwise is identical to %AH1.) The demodulator will also be set to the correct modulation before the transmission begins. This ensures the correct operation of the DCD-function with the %AH1 setting.

**Important:** With 300 Bd (A)FSK and with %AH1, generally the audio center frequency is set to 2000 Hz, independent of the %F-parameter. This achieves compatibility with the convention, that with

FSK/RPR-channel pairs, the audio center frequency of the FSK-signal must always be 500 Hz above the center frequency of the RPR-signal.

The VFO-frequency of the transceiver in %AH1-operation must be set in a way, that for FSK as well as for RPR the channel is hit exactly. Using the standard frequencies on 10 and 14 MHz, this is the case when the display of the transceiver shows **10147.3 kHz (USB)** or **14103.3 kHz (USB)**.

Background: There are more FSK-Gateways than RPR-Gateways existing on short wave channels. If, besides the robustness of the RPR-mode, also the existing FSK-infrastructure shall be used, it is recommended to transmit position data in alternating FSK/RPR-mode.

### **ESC**    %AI (APRS timestamp)

Default: 0

Possible parameters: 0, 1

Enables (1) or disables (0) the APRS-“Timestamp“-function. With “Timestamp“ enabled the **Teensy RPR TNC** adds time information (UTC-time and date) to every APRS-transmission received via the NMEA-port (GPS). Of course this is only possible if the data received from the GPS re-ceiver also contains the time information at all. If the GPS time information can be transmitted in the APRS datagrams, then the 20 minutes of GPS-timeout is not applicable any more. If the GPS-receiver fails, APRS datagrams are also transmitted after the expiry of the 20 minutes, but with the old time information, of course. (Important is that the position and the time at the position belong together.)

### **ESC**    %AM (APRS Mycall)

Default: NONE

Possible parameters: Max. 6-characters callsign with SSID

Defines the (optional) APRS-Mycall. If it is set to NONE, then the global Mycall is used as APRS-Mycall. The APRS-Mycall can be set invalid using the argument „NONE“.

Using separate APRS-Mycalls can be useful, if e.g. several different APRS-systems are operated with different SSID's or if a digipeater shall transfer APRS-data as well as normal Packet-Radio (with different SSID's), etc.

### **ESC**    %AN (APRS Nmea-out)

Default: 0

Possible parameters: 0...3

Physical format: 4800 Bd, 8N1, TTL.

The following modes can be set with the possible parameters:

0:

NMEA-Out is disabled.

1:

APRS-data received on the HF-port (source call, latitude, longitude) are presented as NMEA-sentence (\$GPWPL) at the GPS-port of the **Teensy RPR TNC** /Tracker. This kind of data can be used by appropriate GPS-receivers as waypoint information and can be displayed on the screen of the receiver, matched into a map.

2:

APRS-data received on the HF-port are presented in the usual monitor format at the GPS-port. This is helpful e.g. to establish an APRS-gateway (with RX-function only) using a PC or a controller without USB.

3:

Loopback mode. The **Teensy RPR TNC** presents the data received at the GPS-port („NMEA-in“) unchanged at the NMEA-out port.

4:

Combines the functions of %AN1 and %AN3.

Data is presented at the NMEA-out port also when the **Teensy RPR TNC** is running in KISS-Mode or in Hostmode.

#### **ESC**    **%AO** (APRS pOosition)

Default: NONE

Possible parameters: XXXX.XXS/N YYYYY.YYW/E    i.e.    5557.98N 01417.40E

Enables the entry of a position for the „FIX“-operation (Mode %A2, see above). The position must be entered matching exactly the required „Latitude Longitude“-format, which is degrees including leading zeros, directly followed by minutes with 2 decimal digits and finally the direction. All deviating formats are rejected with an error message.

Example: %AO 4810.30N 01030.25W <Enter>

A „FIX“-position can only be replaced by a new „FIX“-position, but not completely deleted.

#### **ESC**    **%AP** (APRS Path)

Default: APRS via WIDE1-1 WIDE2-1

Possible parameters: APRS-target callsign and maximum 8 digipeater callsigns.

Defines the AX.25 transmit path including target callsign and maximum 8 digipeater callsigns, also with their respective SSID if necessary.

Example:    %AP CQ via WIDE1-1 <Enter>  
              %AP APRS WIDE1-1 <Enter>

Between the target callsign and (optionally) the digipeater list, a „v“ or „via“ can be inserted to increase readability.

A description of the function of current APRS-digipeater callsigns is beyond the scope of this user manual. Appropriate information can be found in relevant literature e.g. Internet. If there is no exact information of available digipeaters available, it is recommended to set WIDE1-1 as the digipeater.

### **ESC**    **%AR** (APRS status report)

Default: NONE

Possible parameters: Up to 80 characters long string (text)

The command %AR serves to define an up to 80 characters long “APRS status report”. In the status report, usually additional information besides the APRS-position beacon is transferred. With the argument “-“ the status-report-text can be deleted or deactivated, respectively set to “NONE”. The frequency of the status-report transmission is set with the %AE-parameter (see there). Status-reports are generally sent by the **Teensy RPR TNC** as separate AX.25-packets. The (AX.25-) path is identical to that of the APRS-position packets.

### **ESC**    **%AS** (APRS Short, data compression)

Default: 0

Possible parameters: 0, 1

Activates (1) or deactivates (0) the compression of the position data in the APRS-datagram. The compressed format actually only has advantages: Shorter datagrams, higher accuracy, and speed and direction can be included in the transfer. However, because some APRS-programs cannot correctly interpret the compressed format, the **Teensy RPR TNC** firmware allows the compression to be switched off. Uncompressed position data can be directly monitored as usual in “Latitude Longitude-format”, as they are sent in clear text format.

### **ESC**    **%AU** (APRS Unproto Cross Mode)

Default: 0

Value range: 0...2

If %AU is set to 2, the Tracker uses the particular modulation type which has been defined using the %AG-command (APRS Gateway modem type) for ALL “Unproto” packets (i.e. UI packets and also for “own” APRS beacons, etc.). Hereby the possibility is opened to change the APRS transmission activity in general to the particular modulation art used for cross mode digipeating. With %AU 1, unproto packets are only sent with the %AG modulation, if the first character of the target callsign is an "A", just like APRS, APXYZ, etc. In practice, it is therefore possible to send only APRS packets in %AG modulation (e. g. HF-DUAL), whereas other unproto packets will be sent in the "normal" modulation.

In practice, this is normally sensible, as in cross mode digipeating, using a transceiver in split operation, only the PTT “decides” on which “band” the TRX presently finds itself (for transmit operation). On this band, transmissions should thus normally all be of the same modulation art. For example: One uses the Tracker for cross mode digipeating from VHF to HF (1200 Bd FSK to



300 Bd Robust Packet), e.g. for the position of a mountain tour (with VHF tracker) to also be transmitted on HF. The **Teensy RPR TNC** works (for example) at the base camp at the foot of the mountain as a cross mode digipeater. Obviously then, the position of the base camp should also be transmitted in RPR on HF and not on VHF with 1200 Bd.

**ESC**    **%AV** (APRS Valid)

Default: 1200 [sec]

Possible parameters: 10...3600 [sec]

Defines how long the (old) GPS-data is valid for APRS in the %A1-mode ("GPS-mode").

**ESC**    **%AY** (APRS sYmbol)

Default: 15 [Dot]

Possible parameters: 1-94, a1-a94

Sets the graphic APRS symbol that an APRS-receiving station should display: e. g. a symbolic car in mobile service (Symbol 30). The symbol numbers follow exactly the table in the APRS-protocol version 1.0. The complete protocol information is available on the Internet. Symbols from the alternative table ("alternate table") can be selected by prefixing an "a" before the symbol number. E. g. "%AY a13" for "House (HF)".

If no symbol number is given as an argument, the "%AY" command displays the actual parameter settings with the current symbol and additionally a short description in square brackets, e. g. "A13 [House (HF)]".

Here is a selection of current symbols with their numbers:

6:	HF Gateway
7:	Small Aircraft
13:	House QTH (VHF)
a13:	House (HF)
15:	Dot
27:	Campground
28:	Motorcycle
30:	Car
47:	Balloon
50:	Recreational Vehicle
53:	Bus
56:	Helicopter
57:	Yacht (sail boat)
65:	Ambulance
66:	Bicycle
70:	Fire Truck
74:	Jeep
75:	Truck
83:	Ship (power boat)
86:	Van

**ESC** %AX (APRS beacon on tracking mode only)

Default: 0

Possible parameters: 0, 1

Enables (0) or disables (1) the APRS-beacon during normal TNC-operation. If %AX is set to 1, APRS-datagrams are only transmitted with "Tracking"-DIP-switch set to "ON". This has the advantage that one can easily switch between APRS mode and normal TNC mode with just the DIP-switch: If the **Teensy RPR TNC** is utilized for email exchange or chatting, one usually does not like to transmit cyclic position data the same time as well. (For position data usually separate frequencies are used which are not suitable for normal data exchange).

With %AX set to 0 the **Teensy RPR TNC** can transmit APRS-datagrams also during normal TNC usage ("Tracking"-DIP-switch "OFF").

### Configuration of the Packet-Radio Mode

(Modulation type or "baudrate" at the transceiver port)

The %B-command is used to set the Packet-Radio operating mode. For Packet-Radio generally the AX.25-protocol is utilized.

**ESC** % B

Default: R300

Possible parameters: 300, R300, R600, 1200

**The Teensy RPR TNC supports the following Packet-Radio operating modes:**

Parameter	Mode
300	300 Bd AFSK (old HF-Packet-Radio standard) TX center frequency default at 1700 Hz (1600 Hz "Space", 1800 Hz "Mark"). RX center frequency: 1700 Hz $\pm$ 400 Hz, automatically tuning
R300	200/600 Bd Robust-Packet-Radio (RPR), automatic selection of speed. TX center frequency fix at 1500 Hz RX center frequency: 1500 Hz $\pm$ 240 Hz, automatically tuning UI-packets (APRS, Unproto) are transmitted with 200 Bd RPR.
R600	Like R300, but UI-packets (APRS, Unproto) are transmitted with 600 Bd RPR.
1200	1200 Bd AFSK.

### Setting the transmission tones at 300 Bd FSK

**ESC** %F

Default: 1700 [Hz]

Possible parameters: 1000...3000 [Hz]

Defines the audio center frequency at 300 Bd (A)FSK ("old HF-Packet"). The value of 1700 Hz has established as a standard within the last years.

**ESC** %M (HF packet monitor)

Presents a list of the 32 last received callsigns in 300 Bd FSK mode, including the measured RX frequency offset, also refer to %T parameter.

### Update the Teensy RPR TNC with latest Firmware

**ESC** %R (Reset)

The %R command puts the **Teensy RPR TNC** into the Boot Loader Mode. This enables firmware-updates by flashing it.

In this mode the **Teensy RPR TNC** is not operation but is waiting for the new firmware. For that to happen it need the PJRC tool. Find it unter the following link:

<https://www.pjrc.com/teensy/loader.html>

Choose the correct firmware, only then the reboot will take place. It is also possible to activate the auto-mode:

- start the update tool
- auto-mode activ
- %R ⇒ Boot loader mode ⇒ the update starts immediately ⇒ reboot

### Setting the Transmit Level

The **Teensy RPR TNC** manages three separate (operating mode dependent) transmit level parameters:

XA: For 300/1200 Bd AFSK.

XF: For 9600 and 19200 Bd Direkt-FSK.

XR: For Robust-PR.

The valid parameter range for all of them is 30-3000 (mV, Peak-to-Peak).

**ESC** %X

Default: XF = 600 mv XA = 300 mv XR = 200 mv

Possible parameters: 30...3000

Sets all three values XA, XF, XR the same time (to the same value).

### **ESC** %XA

Default: 300

Possible parameters: 30...3000

Sets the XA-value (for 300/1200 Bd AFSK).

### **ESC** %XF

Default: 600

Possible parameters: 30...3000

Sets the XF-value (for 9600/19200 Bd Direct-FSK).

### **ESC** %XR

Default: 200

Possible parameters: 30...3000

Set the XR-value (for Robust-PR).

## **Putting all Parameters to Delivery Status**

### **ESC** %ZK

The %ZK command resets all parameters to default values as upon the delivery.

### **ESC** %ZL

The %ZL command resets the configuration parameters to the values that has previously been stored in the non-volatile memory of the **Teensy RPR TNC** (see %ZS). This has the same effect on the parameters as power cycling with "option"-DIP-switch set to "OFF".

%ZL happens automatically when starting-up the **Teensy RPR TNC**.

## **Permanent Storage of all Parameters**

### **ESC** %ZS

The %ZS command stores all current settings permanently into the non-volatile memory of the **Teensy RPR TNC**. At power on, these values are always reloaded and used from now on by the firmware of the **Teensy RPR TNC**.

### 3. Die Meaning of the LED's

**PWR**            **green**=power is provided (subject to change)  
**DCD/PTT**      **green**=DCD, **red**=PTT  
**KISS/CONN**    **green**=KISS, **red**=CONN  
**Fix**            **green**= sat fix established

### 4. Background-Information to „Robust-PR“-Mode (RPR)

Up to now Packet-Radio over shortwave has been basically a non-starter, it has even been heavily criticized because of the low effective throughput and repeats. AX.25 is for shortwave not an ideal protocol, but with automatic Frack- setting and a small MAXFrame values the protocol should, however, function much better on a shortwave channel than has previously been the case generally.

One cannot of course expect an asynchronous protocol to reach the same efficiency as a tight synchronous ARQ-protocol (e.g. PACTOR), but for some applications a multi-user service, with very uncritical transmit/receive switching, as well as almost zero power holding up a connection when no data passing, brings a real advantage that outweighs the lower data throughput.

What finally are the reasons that up to now HF-PR works so poorly, and apart from “forwarding” is hardly ever used? One finds a simple answer : The current modulation type for HF-PR namely un-coded 300 Bd FSK is really unsuitable for normal HF channels. The symbols are much too short even with moderate “Multi-Path effect” (“delay spread”) to work. Additionally, because no sort of error correction code is used, even short troughs or “static” will destroy a many seconds long Packet. Just one missing bit leads to a repeat of the whole packet.

To help cure this problem, it has been developed a new class of robust modulations types especially for Packet-Radio. As a special feature for all the variants of this “Robust PR”, a completely new synchronizations algorithm with tracking properties that were not possible before has been realized. **Frequency deviations of  $\pm 250$  Hz are immediately recognized and with-out any loss of sensitivity compensated**, and this with signals that are buried deep in the noise. Because of this it's possible to remove a tuning display. One can say with good conscience that this is “Plug and Play” for shortwave.

The current firmware of the **Teensy RPR TNC** provides a narrow band (500 Hz) version of the “Robust PR”. A wide band variant (2 kHz) with similar characteristics and 4 times the speed is generally possible.

The currently available “Robust PR” modulation types have the following properties:

Bandwidth:	500 Hz @ -30 dB
Modulation:	Pulse-Shaped OFDM (BPSK, QPSK), similar to PACTOR-III
Average Throughput:	200 or 600 Bit/sec
Crestfaktor (PAPR):	3.0 or 4.2 dB
Delay-Spread:	up to $\pm 8$ msec is tolerated

Coding: High performance convolutional code, "fu ll-frame interleaved",  
rate/2 or rate3/4

As the „Robust-PR“-demodulator automatically recognizes which modulation is currently received, e. g. an APRS system can successively grow or be adapted to new requirements: If an APRS channel is used by only a few users or repeaters and the average distances are large, then longer but more robust packets can be used. With higher occupied channels with averagely lower distances, the faster and shorter packets can be used.

+++ THIS HANDOUT IS INCOMPLETE AND UNDER DEVELOPEMENT +++